



## ON-VEHICLE INSPECTION

### PREPARATION


#### SST

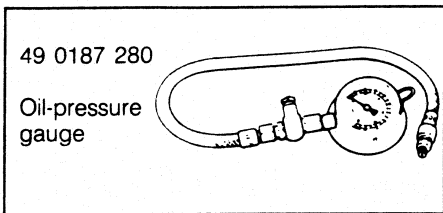


9MU0DX-008

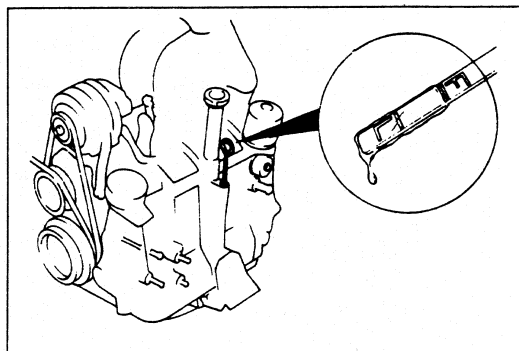

9MU0DX-009

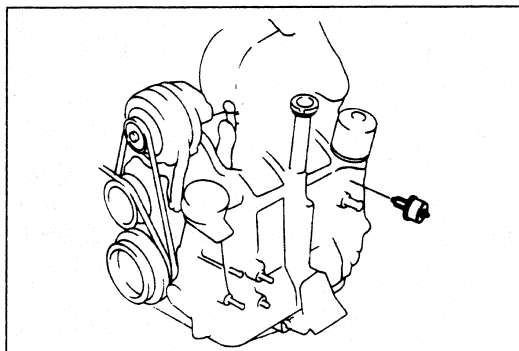

07U0DX-001

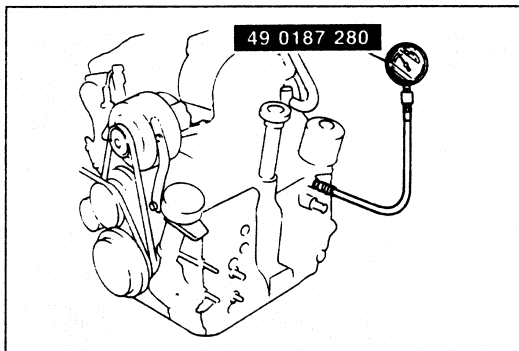

07U0DX-002

### ENGINE OIL

1. Be sure the vehicle is on level ground.
2. Warm up the engine to normal operating temperature and stop it.
3. Wait for five minutes.
4. Remove the oil-level gauge and check the oil level and condition.
5. Add or replace oil if necessary.

#### Note

The distance between the L and F marks on the level gauge represents 1.0 liter (1.06 US qt, 0.88 Imp qt).

### OIL PRESSURE

1. Remove the oil pressure gauge unit.

2. Install the **SST**.
3. Start the engine and let it warm up to operating temperature.
4. Run the engine at **3,000 rpm** and note the gauge reading.

#### Oil pressure

kPa (kg/cm<sup>2</sup>, psi)

	Specification
3,000 rpm	441—540 (4.5—5.5, 64—78)

5. If the pressure is not as specified check for the cause, and repair. (Refer to Troubleshooting Guide.)