


# D INDEX

## INDEX

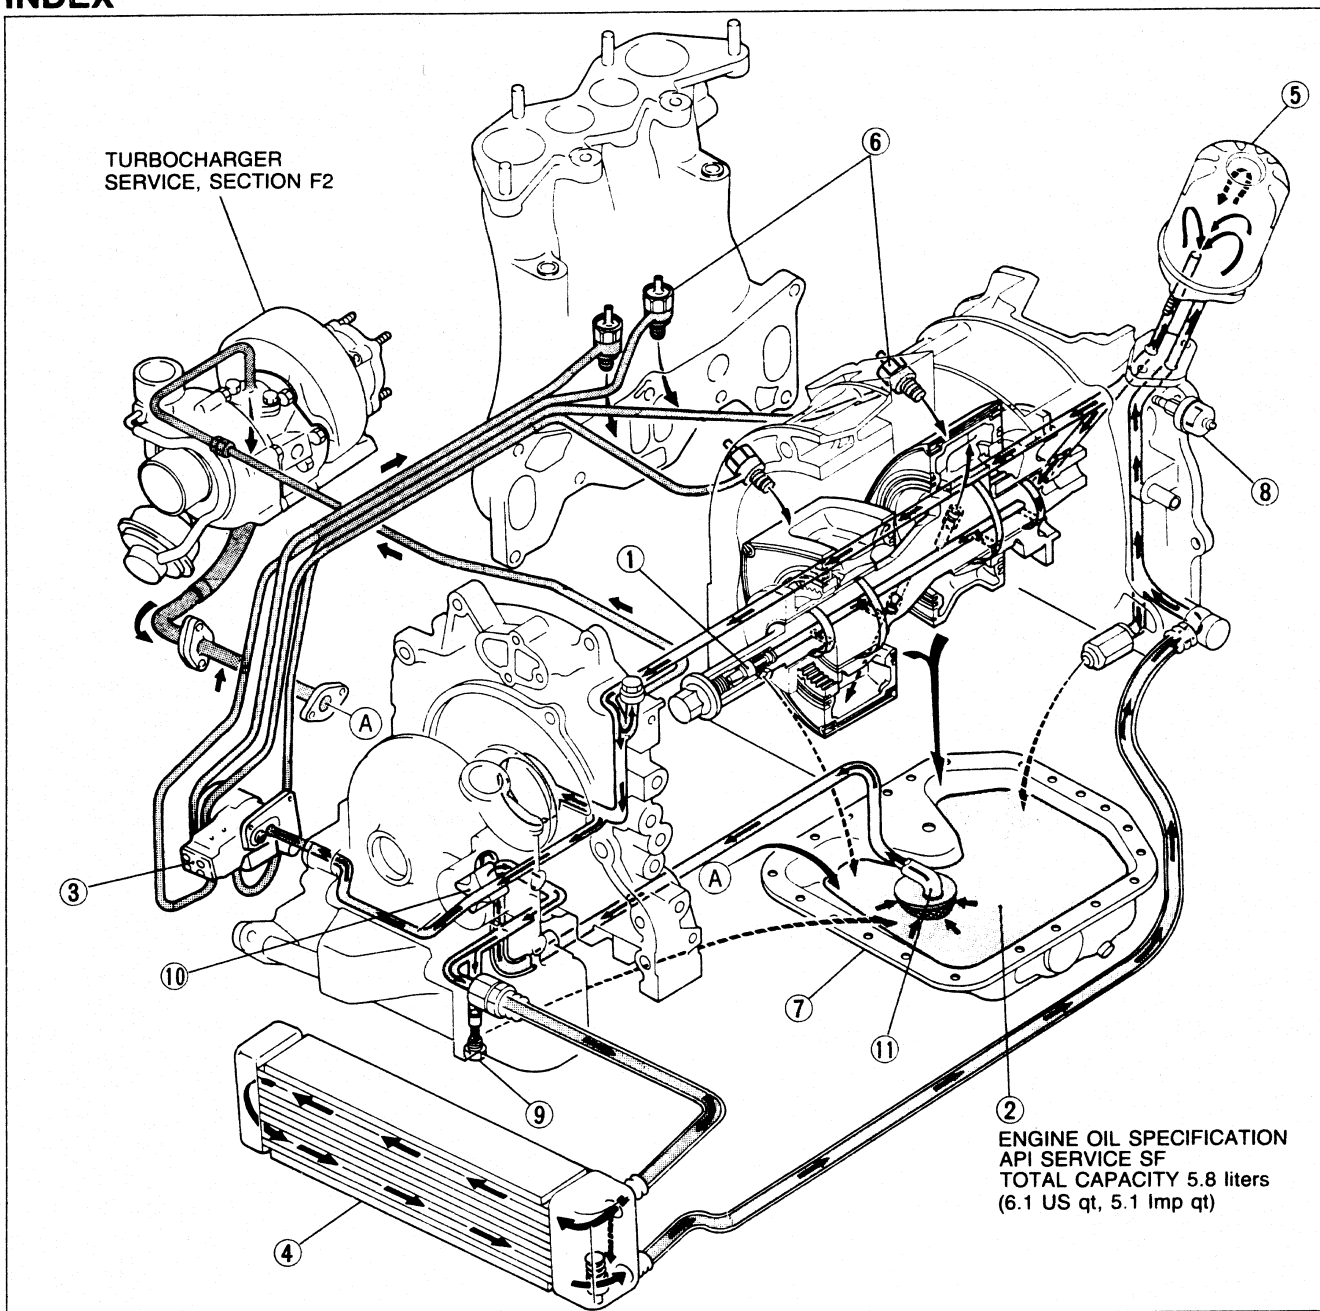

97U0DX-002

- |                                 |           |                               |           |
|---------------------------------|-----------|-------------------------------|-----------|
| 1. Eccentric shaft bypass valve |           | 7. Oil pan                    |           |
| Removal and Installation.....   | page D-15 | Removal.....                  | page D- 7 |
| Inspection.....                 | page D-15 | Installation.....             | page D- 8 |
| 2. Engine oil                   |           | 8. Oil pressure               |           |
| Inspection.....                 | page D- 5 | Inspection.....               | page D- 5 |
| Replacement.....                | page D- 7 | 9. Oil pressure control valve |           |
| 3. Metering oil pump            |           | Removal and Installation..... | page D-15 |
| Inspection.....                 | page D-17 | Inspection.....               | page D-15 |
| 4. Oil cooler                   |           | 10. Oil pump                  |           |
| Removal and Installation.....   | page D-14 | Removal.....                  | page D- 9 |
| 5. Oil filter                   |           | Installation.....             | page D-12 |
| Replacement.....                | page D- 6 | Disassembly.....              | page D-10 |
| 6. Oil nozzles                  |           | Assembly.....                 | page D-10 |
| Inspection.....                 | page D-19 | Inspection.....               | page D-11 |
|                                 |           | 11. Oil strainer              |           |