




**J1: ECU MAIN CONNECTOR**  
 PACKARD 1211 0490  
 PIN: 1208 4912

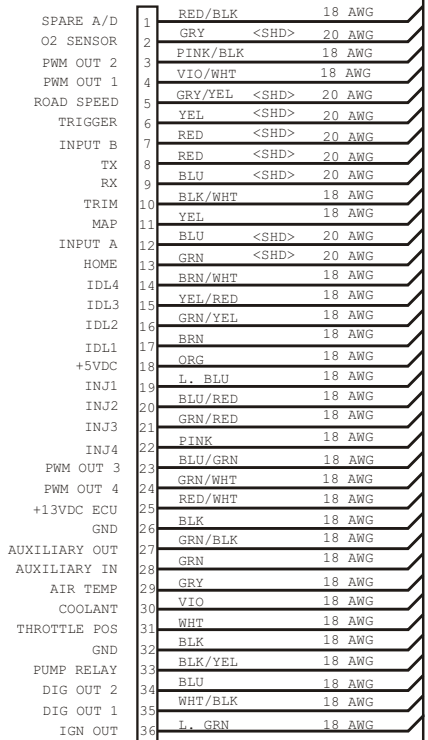


**J2: PC INTERFACE**  
 9 PIN D - FEMALE

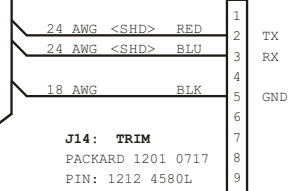


**J14: TRIM**  
 PACKARD 1201 0717  
 PIN: 1212 4580L




**J15: SPARE A/D**  
 PACKARD 1201 0717  
 PIN: 1212 4580L




**J3: FUSE BLOCK**  
 PACKARD 1203 4342  
 PIN: 1212 4582L

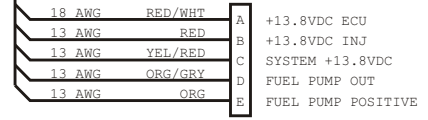

**J4: POWER RELAY**  
 AMP 926526  
 PIN: 341001-3



**J5: PUMP RELAY**  
 AMP 926526  
 PIN: 341001-3




**NOTES:**


- MAIN WIRE COLOUR LISTED FIRST  
 E.G. RED/GRN INDICATES RED WIRE WITH GREEN STRIPE
- USE V-90 HT PVC INSULATION.
- WIRE SIZES AS FOLLOWS (OR NEAREST EQUIVALENT):
 

AWG	AREA (sq.mm)	SUGG. STRANDING	#COND / DIA (mm)
24	0.25		7/0.20
20	0.5		10/0.25
18	1.0		16/0.30
16	1.5		30/0.25
13	2.5		50/0.25
- THE NEGATIVE SIDE OF THE FUEL PUMP SHOULD BE CONNECTED DIRECTLY TO GROUND.


**J8: MAP SENSOR**  
 PACKARD 1202 0403  
 PIN: 1212 4582L




**J16: TRIGGER INPUT**  
 PACKARD 1205 2848  
 PIN: 1204 8074

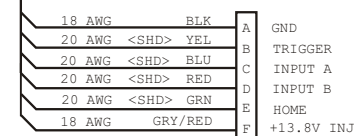


**J17: ROAD SPEED**  
 PACKARD 1211 0293  
 PIN: 1204 8074




**J6: O2 SENSOR**  
 PACKARD 1201 0717  
 PIN: 1212 4582L




**J13: INJECTOR HARNESS**  
 PACKARD 1204 7938  
 PIN: 1204 8074

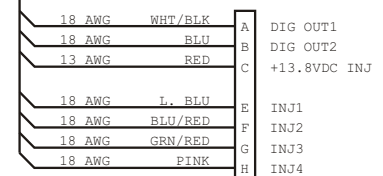

**J18: PWM OUTPUT**  
 PACKARD 12146045  
 PIN: 12048074

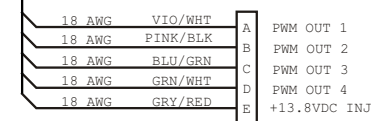


**J10: THROTTLE POSITION**  
 PACKARD 1201 5793  
 PIN: 1212 4582L




**J11: AIR TEMP SENSOR**  
 PACKARD 1216 2197  
 PIN: 1210 3881L



**J12: COOLANT SENSOR**  
 PACKARD 1216 2193  
 PIN: 1210 3881L



**J9: IDLE SPEED MOTOR**  
 PACKARD 1201 5798  
 PIN: 1212 4580L



**J7: IGNITION OUTPUT**  
 PACKARD 1202 0786  
 PIN: 1212 4580L

